

Hondalawnlovers

Safe Storage Of Your Blower



SAFE STORAGE OF YOUR BLOWER

Proper storage preparation is essential for keeping your handy blower trouble free and looking good. The following steps will help to keep rust and corrosion from impairing your handy blower.

CAUTION:

- If the handy blower has been running, the engine will be very hot; allow it to cool before proceeding.
- Place the handy blower on a level surface and remove the spark plug cap to be certain the engine will not start accidentally.

1. Clean all exterior surfaces, touch up any damaged paint, and coat other areas that may rust with a light film of oil.
2. Drain the fuel.

WARNING:

Gasoline is extremely flammable and is explosive under certain conditions. You can be burned or seriously injured when handling fuel. Please observe the following:

- a. Be sure that the engine oil filler cap is tightened securely.
 - b. Remove the fuel tank cap and drain the fuel into the container by tipping the engine toward the fuel filler neck.
 - c. Press the priming pump several times until all fuel left in the fuel return
 - d. Tip the engine toward the fuel filler neck again to drain the fuel left in the fuel tank into the container.
 - e. Tighten the fuel tank cap securely after draining the fuel completely.
3. Clean the engine oil.
 4. Clean the air cleaner.
 5. Remove the spark plug and pour a couple of drops of clean engine oil into the cylinder.
 6. Crank the engine several revolutions to distribute the oil, then reinstall the spark plug. Pull the starter grip slowly until resistance is felt.
 7. Cover the handy blower to keep out dust.

